



**PROFESSIONAL SIX-CHANNEL AUDIO
MIXER WITH USB INTERFACE,
BLUETOOTH, AND DSP SOUND EFFECTS**

AMX7332 OWNER'S MANUAL



Thank you for purchasing the **Audio2000's®** professional six-channel audio mixer with USB interface, Bluetooth, and DSP sound effects! For the best results and the utmost satisfaction from your new unit, please read this manual thoroughly, and retain it for future reference. For more information, please visit our website (www.audio2000s.com).



CONTENTS

Warning.....	1-2
Precautions.....	3
Package Contents	4
Features.....	4
Functions and Controls.....	4-6
Specifications.....	7
Troubleshooting.....	8
Service Information.....	9

WARNING

* TO PREVENT FIRE OR SHOCK HAZARD, DO NOT EXPOSE THIS APPLIANCE TO RAIN OR MOISTURE.

* THIS APPLIANCE SHALL NOT BE EXPOSED TO DRIPPING OR SPLASHING WATER AND THAT NO OBJECT FILLED WITH LIQUIDS SUCH AS VASES SHALL BE PLACED ON APPARATUS.

 <p>This lightning flash with arrowhead symbol, within an equilateral triangle, is intended to alert the user to the presence of uninsulated "dangerous voltage" within the product's enclosure that may be of sufficient magnitude to constitute a risk of electric shock to persons.</p>	<p>CAUTION RISK OF ELECTRIC SHOCK DO NOT OPEN</p> <p>Warning: To reduce the risk of electric shock, do not remove cover (or back) no user-serviceable parts inside. Refer servicing to qualified service personnel.</p>	 <p>The exclamation point within an equilateral triangle is intended to alert the user to the presence of important operating and maintenance (servicing) instructions in the literature accompanying the appliance.</p>
---	--	---

IMPORTANT SAFETY INSTRUCTIONS

- 1) Read these instructions.
- 2) Keep these instructions.
- 3) Heed all warnings.
- 4) Follow all instructions.
- 5) Do not use this apparatus near water.
- 6) Clean only with dry cloth.
- 7) Do not block any ventilation openings. Install in accordance with the manufacturer's instructions.
- 8) Do not install near any heat sources such as radiators, heat registers, stoves, or other apparatus (including amplifiers) that produce heat.
- 9) Do not defeat the safety purpose of the polarized or grounding-type plug. A polarized plug has two blades with one wider than the other. A grounding type plug has two blades and a third grounding prong. The wide blade or the third prong are provided for your safety. If the provided plug does not fit into your outlet, consult an electrician for replacement of the obsolete outlet.
- 10) Protect the power cord from being walked on or pinched particularly at plugs, convenience receptacles, and the point where they exit from the apparatus.
- 11) Only use attachments/accessories specified by the manufacturer.
- 12) Use only with the cart, stand, tripod, bracket, or table specified by the manufacturer, or sold with the apparatus. When a cart is used, use caution when moving the cart/apparatus combination to avoid injury from tip-over.



- 13) Unplug this apparatus during lightning storms or when unused for long periods of time.
- 14) Refer all servicing to qualified service personnel. Servicing is required when the apparatus has been damaged in any way, such as power-supply cord or plug is damaged, liquid has been spilled or objects have fallen into the apparatus, the apparatus has been exposed to rain or moisture, does not operate normally, or has been dropped.
- 15) Grounding or Polarization This product may be equipped with a polarized alternating current line plug (a plug having one blade wider than the other). This plug will fit into the power outlet only one way. This is a safety feature. If you are unable to insert the plug fully into the outlet, try reversing the plug. If the plug should still fail to fit, contact your electrician to replace your obsolete outlet. Do not defeat the safety purpose of the polarized plug.
- 16) Ventilation Slots and openings in the cabinet are provided for ventilation and to ensure reliable operation of the product and to protect it from overheating, and these openings must not be blocked or covered. The openings should never be blocked by placing the product on a bed, sofa, rug, or other similar surface. This product should not be placed in a built-in installation such as a bookcase or rack unless proper ventilation is provided or the manufacturer's instructions have been adhered to.
- 17) The MAINS plug or an appliance coupler is used as the disconnect device, the disconnect device shall remain readily operable.

PRECAUTIONS

On Safety

- * Operate only on designated AC power supply (120V AC in North America).
- * Should any liquid or solid object fall into the cabinet, unplug the unit and have it checked by qualified personnel before operating it any further.
- * Unplug the unit from the wall outlet or set the Master switch to OFF if it is not to be used for several days.
- * To disconnect the cord, pull it out by the plug. Never pull the cord itself.

On Installation

- * Allow adequate air circulation to prevent internal heat build-up. Do not place the unit on surfaces (rugs, blankets, etc.) or near materials (curtains, draperies) that may block the ventilation holes.
- * Do not install the unit in a location near heat sources such as radiators or air ducts, or in a place subject to direct sunlight, excessive dust, mechanical vibration or shock.

On Repackaging

Do not throw away the carton and packing materials. They make an ideal container in which to transport the unit. When shipping the unit to another location, repack it as it was originally packed at the factory.


PACKAGE CONTENTS

<u>Items</u>	<u>Quantities</u>
AMX7332 Four-Channel Audio Mixer	1
Multi-Voltage AC/DC Power Supply Cord	1
Owner's Manual	1

FEATURES


1. 6-Channel Audio Mixer
2. Built-in USB Interface to Computer for Recording and Music Playing Applications
3. Built-in 32-Bit/24Bit AD-DA Converter DSP Sound-Effects Processor
4. Built-in Bluetooth Interface
5. Built-in MP3 Player Supporting a Variety of Music Formats
6. Microphone + Stereo Line Inputs
7. Two AUX Outputs
8. Ultra-Musical 3-Band EQ on All Channels
9. MUTE and PFL Control Buttons on All Channels
10. AUX1, AUX2, and PAN Controls on All Channels
11. Dual-LED Displays for DSP and USB
12. Peak LED Indicators on All Channels
13. 7-Band Stereo Graphic Equalizer
14. High-Accuracy Level Indicator
15. Phantom Power Switch (+48V)
16. Sealed Rotary Control Knobs to Resist Dust and Grime
17. Rugged Steel Chassis
18. Multi-Voltage Power Supply for Worldwide Use


FUNCTIONS AND CONTROLS

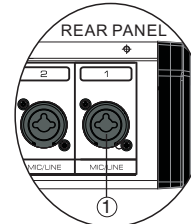

CHANNEL INPUT


1. **[MIC/LINE] Input Jack** --- This is a balanced XLR input jack. This XLR input jack is to be connected to a microphone, a musical instrument, or an audio device through a balanced XLR cable.
2. **[GAIN] Control Knob** --- This knob is used to raise or lower the gain level of the input signal. There are two sets of gain control dB numbers. The lower sets of dB numbers are for the microphone signal level control while the higher sets of dB numbers are for the audio signal level control. When the audio level is higher than a predetermined threshold, the [PEAK] LED indicator (refer to numeral 10) will keep blinking until the audio level goes below the threshold.
3. **[HIGH] Treble-tone Control Knob** --- This knob is used to adjust the gain for the input signal band centered at 12.5KHz in the range from -15dB to +15dB.
4. **[MID] Alto-tone Control Knob** --- This knob is used to adjust the gain for the input signal band centered at 2.5KHz in the range from -15dB to +15dB.
5. **[LOW] Bass-tone Control Knob** --- This knob is used to adjust the gain for the input signal band centered at 80Hz in the range from -15dB to +15dB.
6. **[AUX1] Control** --- This control adjusts the level of the input sent to the AUX1 output (refer to numeral 4 in section MAIN TERMINALS on page 6).

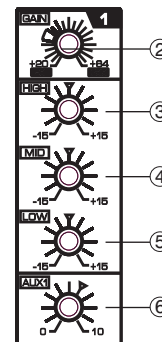

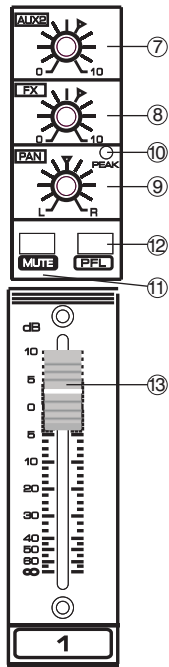

7. **[AUX2] Control** --- This control adjusts the level of the input sent to the AUX2 output (refer to numeral 3 in section MAIN TERMINALS on page 6).
8. **[FX] Control Knob** --- This knob is used to adjust the level of the signal routed from this channel to the reverberation line. This signal level will vary according to the settings of the channel attenuators (HIGH, MID, LOW). The signals from the stereo channel (R and L) will be mixed before being routed to the reverberation line.
9. **[PAN] Control** --- This control determines how much of the input signal is sent to the left and right channels. When the knob is centered at 12 O'clock, the input signal is sent equally to the left channel and the right channel with a -3dB attenuation. Turn this control fully counter-clockwise to send 100% of the input signal to the left channel. Turn this control fully clockwise to send 100% of the input signal to the right channel.
10. **[PEAK] LED Indicator** --- This PEAK LED indicator will keep blinking when the input signal level is higher than a predetermined threshold. When the PEAK LED indicator is blinking, adjust the gain control knob (refer to numeral 2) to a lower gain level until the PEAK LED indicator stops blinking to maintain the sound quality.
11. **[MUTE] Button** --- Press this knob down to silence the input signal (preventing the input signal from being sent to the main output).
12. **[PFL] Pre-Fade Listen Button** --- Press this knob down to monitor (or listen) the channel's audio at the point before the audio level fader.
13. **[LEVEL] Control Fader** --- This level control fader is used to raise or lower the audio volume of the signal from this channel.


MAIN CONTROLS

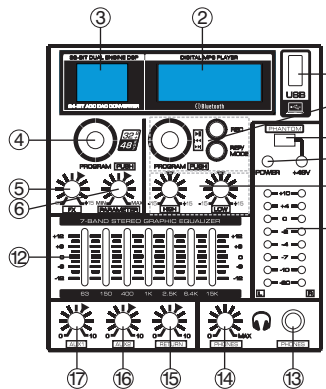

1. **[USB] Interface** --- The input sources include the USB device (with the icon [USB]), a computer (with the icon [REC]), and the built-in Bluetooth (with the icon [BT]). The input source is selected in the order of "KG-08A".
 2. **[DIGITAL MP3 PLAYER] Display**
 3. **[32-BIT DUAL ENGINE DSP] Display**
 4. **[32-B/48KHz PROGRAM] Control Knob** --- Push down and turn this control knob to select one of the sixteen built-in sound effect modes.
 5. **[FX] Level Control** --- This controls the amplitude of the sound effect. Turn clockwise to increase the amplitude of the sound effect and counter-clockwise to decrease it. Turn this control fully counter-clockwise to turn the sound effect off.
 6. **[PARAMETER] Control** --- This controls the parameter of the sound effect.
7. **MP3 Controls** ---
- a. **[PROGRAM PUSH] Control Knob**: Press this knob to start playing the music from the USB device connected to the USB interface. Press this knob again to have the music paused. When the music is paused, press this knob again to continue the music from where it was paused. When the music is in progress, turn this knob to move the track up or down.
 - b. **[REC] Button**: When music is in progress, press and hold this button for a few seconds to start recording. When the recording is in progress, press this button to stop recording and have the recorded music replayed. When the recorded music is being replayed, press this button to switch to replay the first USB music. When the USB music is being replayed, press this button to switch to replay the first recorded music.
 - c. **[REP/MODE] Button**: Press this button to switch between USB and BLUETOOTH. Press and hold this button to go to the repeat mode and to have the same music repeated. Press and hold this button again to leave the repeat mode and have the music replayed normally.


8. **[HIGH/LOW] Controls** --- Turn the HIGH control to adjust the treble tone of the music through the USB interface. Turn the LOW control to adjust the bass tone of the music through the USB interface.
9. **[+48V PHANTOM] Button/LED Light** --- When one or more condenser microphones are connected to the XLR [MIC] input jacks (refer to numeral 1 in the CHANNEL INPUT section), press this [+48V PHANTOM] button to turn on the 48V phantom power to the condenser microphones via the XLR [MIC] input jacks. When the 48V phantom power is turned on, the phantom power LED light will be turned on and stay on.
10. **[POWER] LED Light** --- This power LED light will stay on after the main power is turned on.
11. **Stereo Signal Level Meter** --- This is a stereo signal level meter configured with eight LED lights for each channel.
12. **[7-BAND STEREO GRAPHIC EQUALIZER]** --- This 7-band stereo graphic equalizer adjusts the main output stereo signal sound quality.
13. **[PHONES] Stereo Output Jack** --- This is a 1/4" TRS jack for the stereo monitoring earphones.
14. **[PHONES] Level Control** --- This control is used to adjust the earphone volume.
15. **[RETURN] Level Control** --- This control is used to adjust the signal level to the [RETURN] input jack (refer to numeral 2 in Section MAIN TERMINALS on page 6).
16. **[AUX2] Level Control** --- This control adjusts the signal level from the [AUX2] output jack (refer to numeral 3 in Section MAIN TERMINALS on page 6).
17. **[AUX1] Level Control** --- This control adjusts the signal level from the [AUX1] output jack (refer to numeral 4 in Section MAIN TERMINALS on page 6).

MAIN TERMINALS

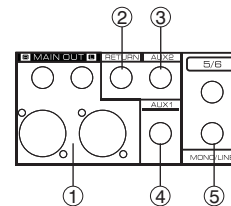

1. **[MAIN OUT] Stereo Output Jacks** --- These are stereo main output jacks, including a left 1/4" TS jack, a right 1/4" TS jack, a left balanced XLR male jack, and a right balanced XLR male jack. These jacks are to be connected to power amplifiers or active speakers..
2. **[RETURN] Input Jack** --- The [RETURN] input jack is a 1/4" TS jack. The [RETURN] input jack can be utilized alone as an input jack connecting to an external sound source.
3. **[AUX2] Output Jack** --- This AUX2 output is a 1/4" TS jack. This AUX2 output is the sum of the signals sent from each channel. If a particular channel's AUX2 control knob (refer to numeral 7 in section CHANNEL INPUT on page 5) is fully turned down, that channel is not contributing to the AUX2 output signal.
4. **[AUX1] Output Jack** --- This AUX1 output is a 1/4" TS jack. This AUX1 output is the sum of the signals sent from each channel. If a particular channel's AUX1 control knob (refer to numeral 6 in section CHANNEL INPUT on page 4) is fully turned down, that channel is not contributing to the AUX1 output signal.
5. **[5/6] Mono/Stereo Input Jacks** --- These are the 1/4" TS input jacks for channel 5 and channel 6. Channel 5 is utilized as the left channel while channel 6 is utilized as the right channel in the stereo mode. If only one 1/4" TS plug is connected to channel 5 and the channel 6 input jack is not connected, the mono audio signal to channel 5 will be routed to channel 6 simultaneously, such that both channel 5 and channel 6 carry the same mono audio signal.

POWER SUPPLY

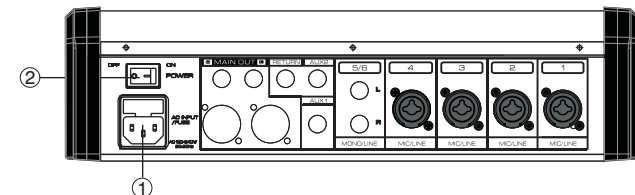

1. **[FUSE HOLDER/IEC MAINS RECEPTACLE]** ---The console is connected to the mains via the cable supplied, which meets the required safety standards. Blown fuses must only be replaced by fuses of the same type and rating. The mains connection is made via a cable with IEC mains connector. An appropriate mains cable is supplied with the equipment.
2. **[POWER] Switch** --- This is an ON/OFF power switch.

SPECIFICATIONS

INPUT CHANNELS	MONO: MIC/LINE	4
	STEREO: LINE	1
	USB SOUND CARD	1
OUTPUT CHANNELS	MP3	1
	STEREO OUT	1
	PHONES	1
BUS	RETURN	1
	SEND	2
INPUT CHANNEL FUNCTION	PAD	26dB
	EQ	HIGH: Gain +15dB/-15dB, Frequency: 12KHz Shelving MID: Gain +15dB/-15dB, Frequency: 2.5KHz Shelving LOW: Gain +15dB/-15dB, Frequency: 80Hz Shelving
	PEAK LED	LED turns on when post EQ signal reaches 3dB below clipping point
LEVEL METER	2*8-segment LED meter , (+10,+4,0,-3,-2,-7,-10-20 dB)	
EFFECTS	16DSP (with delay,echo and pingpong delay)	
PHANTOM POWER VOLTAGE	+48V	
POWER SOURCE	100-240VAC	
POWER	20W	

TROUBLESHOOTING

Should problems occur, they are, in many cases, due to simple operation mistakes or the like. On the basis of the following checks, you will be able to rectify a number of problems yourself without difficulty. If the problem cannot be remedied after the following checks, please consult your dealer.

PROBLEM	POSSIBLE CAUSES	SOLUTIONS
Power can not be turned on	Power Supply cord was not connected or was not connected securely.	Securely connect the power supply cord to the mixer DC input and/or the AC power outlet.
	The power supply cord is defective.	Replace the power supply cord.
	The AC power outlet has no power.	Connect the power supply to an AC power outlet with proper power.
No output sound	The AC power source is from an AC power extension cord and the power switch of the extension cord is not turned on.	Turn on the power switch of the AC power extension cord.
	The power is off.	Turn on the power.
One channel no sound	The stereo level fader was turned to minimum.	Adjust the stereo level fader to have an optimal output level.
	The main output audio cable is missing or defective.	Connect, repair or replace the audio cables.
Microphone no sound	The gain control knob to the channel was turned to minimum.	Adjust the gain control knob to that channel to have an optimal output level.
	The level control knob to the microphone channel was turned to minimum.	Adjust the level control knob to that channel to have an optimal output level.
Distorted sound	No phantom power to the condenser microphone	Turn on the phantom power.
	The gain control knob to the microphone channel was turned to minimum.	Adjust the gain control knob to that microphone channel to have an optimal microphone output level.
	The level control knob to the microphone channel was turned to minimum.	Adjust the level control knob to that microphone channel to have an optimal microphone output level.
Distorted sound	The amplitude of the input signal is over the threshold.	Adjust the gain control knob to lower the input gain.
	The amplitude of the main output signal is over the threshold of the connected amplifiers or active speakers.	Adjust the stereo level fader to lower the main output level.

SERVICE INFORMATION

SHIPPING DAMAGE

If the shipping carton is found to be damaged, notify the delivery company immediately. Save the damaged carton as evidence for the delivery company to inspect. It is the responsibility of the consignee to file a claim with the delivery company for any damaged that occurs during shipping. In the case that the shipping carton is in good condition but the unit is damaged or defective, call **Audio2000'S®** at 805/523-2759.

FACTORY SERVICE

If the equipment needs factory service, call **Audio2000'S®** at 805/523-2759 for a Return Authorization number (RA number) and the address of the authorized service representatives. Insure and ship the product, prepaid, in its original carton along with proof of purchase in the form of a bill of sale or receipted invoice to the above address. Please clearly write the RA number on the shipping carton. Also enclose a note describing the problem along with any other helpful information such as where and how the unit was used.

LIMITED WARRANTY

H&F Technologies, Incorporated (H&F) hereby warrants that **Audio2000'S®** products will be free from defects in material and workmanship for a period of 1 (one) year from date of purchase. At its option, H&F will repair or replace the defective product and promptly return it to you.

The Limited Warranty will not cover any item that has been, in H&F's estimation, subject to alteration, misuse, neglect, accident or improper installation. In addition, any service not performed by H&F or an authorized service center will terminate terms of this warranty. Normal wear and tear of this product will not be covered by this or any implied warranty.

No liability will be accepted for damages/loss directly caused from the use of this product. H&F's liability shall be limited to the repair/replacement of this product if found to be defective.

© 2017 H & F Technologies, Incorporated (website: www.audio2000s.com)